

Wireless Backup Monitoring System

1. Connect wireless monitor and wireless backup camera (Cam 1) to power (same vehicle).
2. Connect Cam 2 wireless backup camera to power (different vehicle).
3. Once monitor and cameras are connected to the power source and placed within connection range, both will automatically pair with the monitor.
 - a. If camera 2 does not pair, manual pairing needs to occur.
 - i. Manual Pairing: menu -> pairing
4. Once monitor is out of range of Cam 2, it will disconnect. Once monitor is within range of Cam 2, the camera should automatically pair, if not, manual pairing has to occur.
5. If Cam 1 is the only camera wanting to be paired on monitor, Cam 2 needs to be turned off.
 - a. Turning Cam 2 off: menu -> cam set up -> Cam 2 on/off
6. Monitor can be turned off/on by clicking the power button if it distract drivers especially during the night time.