IPAS User Manual

Vehicle Tag — Pedestrian Tag

Intelligent Proximity Alert System




Contents


1. What is IPAS?	3
2. Caution / Warning for Safety	4
3. Components / Names of Parts	5
4. Specifications	6
5. Installation	7
6. Setting 8 ~	10
· [IND] Danger / Caution Area Distance Setting	8
· [IND] Volume Control	8
· [IND] Setting Initialization	8
· [IND] How to Set the Distance	9
· [PT] Alarm type Setting	10
· [PT] Volume Control	10
· [PT] How to Register Driver Tag	11
· [PT] How to Release Driver Tag	11
· [PT] How to Deactivate the Driver Registration Function	11
7. How to use 11 ~	12
· Indicator Instruction that a driver must know	11
· PT instruction that a pedestrian must know	11
· LED status display	12
8. Check list before reporting failure	13
9 Warranty	15

Thank you for purchasing KIGIS IPAS product from KYUNGWOO SYSTECH, Inc. This product is a safety-assisting device to give warning signals by detecting the proximity of vehicles and pedestrians at industrial working site. Any property or life damage casued by the breach of safety regulation and users' carelessness will not be held responsibility. Before using this product, please read this manual carefully.

1. What is IPAS?

IPAS is an intelligent proximity alert safety and assistant system that prevents collisions by signaling dangers in 2 way communication to both drivers and pedestrians when pedestrians approach to a vehicle or vehicles approach to other vehicles in industrial working site. It is easy to install without causing any damages to the vehicle, and compared to other products, the outstanding proximity detection is an advantage that IPAS only offers.



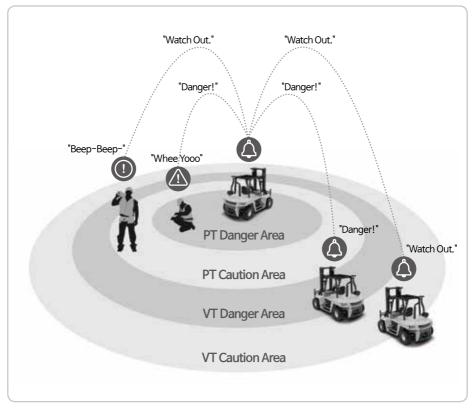

X IPAS is applicable to all industrial vehicles. (excavators, forklifts, loaders, tractors, etc.)

2. Caution/Warning for Safety



Caution!

* Failure to observe the precautions in this manual may result in damage to the product or your property.



Use only DC 12/24V. For vehicles with DC 36/48V, be sure to connect SMPS module to use DC 12/24V. Otherwise, this may cause trouble.



Do not place the product near flammable materials, stoves, candles, or fire. This may cause fire and product deformation.



Do not intentionally immerse the product in water or wash it in running water. This may cause trouble.



If the product smells, smokes, or makes abnormal noises, turn off the power and contact the customer service center immediately.




Caution!

 $\label{eq:product} \ensuremath{\,\times\,} \text{Failure to follow the warnings in this manual may result in damage to the product or serious injury.}$




Do not touch the connector or wiring with wet hands. This may cause electric shock or fire.



Do not place heavy objects on the product or on wiring, or shock. It may cause electric shock or fire.



If a connector or a wiring gets wet, wipe it with a dry towel. Otherwise, it may cause electric shock or fire.



Do not disassemble or modify this product. This may cause trouble, and After-Sale Service will not be available.


Usage Precautions



The pedestrian tag (PT) is a rechargeable product, so do not replace the battery. There is a risk of malfunction or explosion.



Since the pedestrian tag (PT) is a built-in battery product, please keep it in a cool place away from direct sunlight when not in use.




Combine PT and the holder in the proper way as shown in illustration. If not, a malfunction may be caused by an inflow of liquid matters.


* CAUTION Risk of explosion if battery is replaced by anincorrent type. Dispose of used batteries according to the instructions.

* Any accidents caused by not following the instructions in this manual are the user's responsibility.

3. Components/Names of Parts

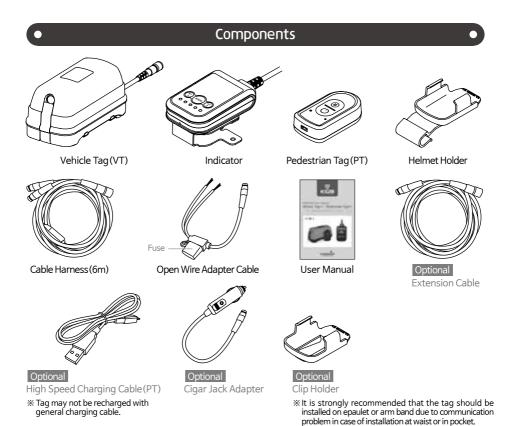

* The appearance of the product may be slightly different from the actual product received.

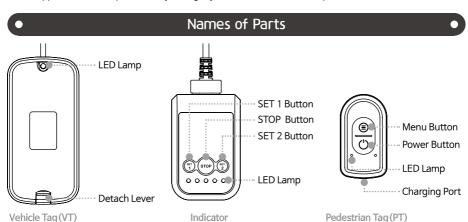

4. Specifications

Specifications		Vehicle Tag(VT)	Indicator	Pedestrian Tag (PT)
Product Image				
	Power	12/24V DC Input(9/32Vdc)	12/24V DC Input(9/32Vdc)	-
	Current	300mA	500mA	-
	Interface	CAN Bus 2.0	CAN Bus 2.0	-
Electrical Feature	LED Status and Alarm method	·Normal operation : Green LED flashing ·Approaching alarm : Green/Red LED flashing	Normal operation Green LED flashing Approaching alarm Green/Red LED flashing + Warning voice	·Normal operation : Green LED flashing ·Approaching alarm : alarm + vibration(3 options)
eature	Sound Level / @Distance	-	92dB / 0.1m	87dB / 0.1m
	Battery	_	-	Lithium polymer 950mA
	Operating Voltage	_	-	3.7V
	Charge Interface	-	-	Micro USB Type-B(5V/1A)
	Charge Time	-	-	Approximately 1 hour 30 minutes
	Charge _ Current		-	0.85mA
	Operating Time	-	-	6 days(8 hours/day)
_ \	Size	177.8 × 84.1 × 86mm	93 × 130.5 × 47.5mm	40 × 72 × 19.5mm
Mechanica Feature	Weight	444g	207g	58.5g
<u>8</u>	Mounting Method	Magnet pad attachment method	Fixed with screw (or adhesive tape)	Clip, Necklace chain
o ds	Operating Temperature	-30 ~ 85°C	-30 ~ 85°C	-20 ~ 55°C
Opereation Specification	Storage Temperature	-40 ~ 85°C	-40 ~ 85°C	-20 ~ 55°C
ion	Waterproof	IP65	IP65	Basic waterproof

 $[\]ensuremath{\mathbb{X}}$ Some features may change without prior notice to improve the performance of the product.




5. Installation



A Caution!

It is highly recommended to install IPAS with the power off. Turn on the power after connecting all products.

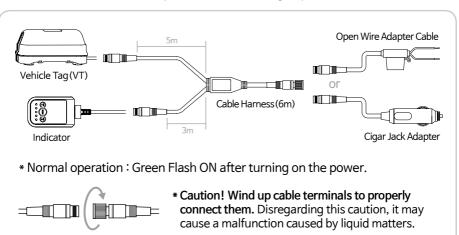




It is more desirable to install VT in a 360 ° open space for example on top of cabin, rather than a space insde cabin. This product, as a wireless frequency (RF) device, is better communicative in operation in a open space.

KIGIS IPAS is designed with the customer in mind for easy installation without the help of an installer. The powerful magnet can be attached easily on VT floor without damaging the vehicle and it is also convenient to detach with detach lever.

It can be easily installed by using cable ties in case of no magnet on vehicle.

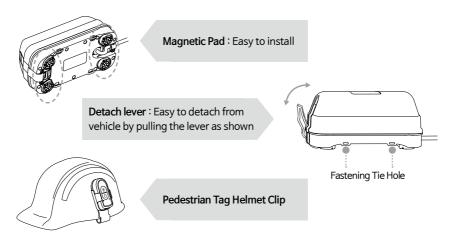

6. Setting - Indicator

* Detailed setting by each function is available by IPAS Toolkit. (Please refer to IPAS Toolkit user manual)

Danger / Caution Area Distance Setting

* In a condition of normal operation

Set the distance in order by following below 4 steps.

- Setting PT Danger Area ▶
- Setting PT Caution Area ▶
- Setting VT Danger Area ▶
- Setting VT Caution Area ▶

Distance Setting Completed



① Press and hold SET 1 and SET 2 buttons simultaneously for 2 seconds or more.



② Set the PT Danger Area by pressing SET 1 or SET 2 buttons. (Refer to "How to set the distance" on the following page)



③ Press STOP button to complete the PT Danger Area setting.



When green LED is on, set the PT Caution Area by pressing SET 1 or SET 2 buttons. (Refer to "How to set the distance" on the following page.)



⑤ Press STOP button to complete the PT Caution Area setting.



⑥ When red LED is on, set the VT Danger / Caution Area by pressing SET 1 or SET 2 buttons as the previous process ②~⑤.

Volume Control

SET 1 Button: - Volume



— SET 2 Button: + Volume

Setting Initialization

※ In case of malfunction


- ① Press and hold SET1, STOP and SET2 buttons for 3 seconds.
- ② When the red LED is flashing sequentially, press and hold the STOP button again for more than 2 seconds. The LED will turn off and the setting will be initialized. Reboot will take about 5 seconds. (Do not turn off the vehicle until the green LED flashes.)

** Default values after initialization : 4m for PT Danger Area / 8m for PT Caution Area / 8m for VT Danger Area / 10m for VT Caution Area

6. Setting - Indicator

How to Set the Distance

Distance setting can be set to even distance [2/4/6/8/10m] or odd distance [1/3/5/7/9m]. The default setting is even distance.

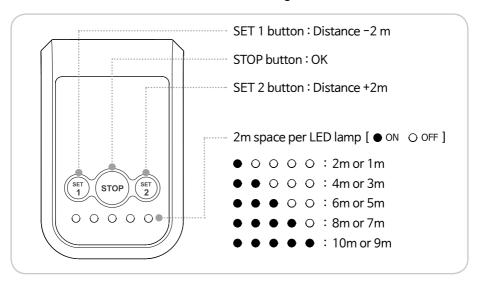

* Odd distance [1/3/5/7/9m] change : Press and hold SET 1 + STOP button at the same time.

Ex) Setting PT Danger Area 3m, PT Caution Area 9m / VT Danger Area 5m, VT Caution Area 7m

① Set an even distance 1m longer than the desired PT Danger, Caution Area / VT Danger, Caution Area as shown below. (Set 3m⇒4m, 9m⇒10m / 5m⇒6m, 7m⇒8m)

- ② Press & hold SET 1 button + STOP button at the same time, It is set to be 1m Shorter and it changes into 3m distance for PT Danger Area / 9m distance for PT Caution Area / 5m distance for VT Danger Area / 7m distance for VT Caution Area.
- * If you want to change from odd distance to even distance again, press and hold Set 2 & STOP.



As IPAS releases warning signals by detecting the proxmity on 0.5 second cycles, proximity distance must be set considering vehicle speed.

9

6. Setting - Pedestrian Tags

Alarm type Setting



① Press and hold the power button to turn on the power. (Charging is required if the red LED is on.)




② Press and hold the menu button. (A short vibration will occur.)



③ Press the power button to set the desired alarm type. (Please refer to the alarm system below.)



④ Press and hold the menu button to complete the setup.



Volume Control





 Press and hold the power button to turn on the power.
 (Charging is required if the red LED is on.)




② Press and hold the menu button. (A short vibration will occur.)



 Press the menu button to set the desired volume level.
 (See volume steps below.)



④ Press and hold the menu button to complete the setup.



6. Setting - Pedestrian Tags (Driver Mode)

Driver Mode is a function that deactivates PT of a driver who frequently drives vehicles. Prior to set the Driver Mode below, PC program "IPAS Toolkit" setting must be completed.

How to Register Driver Tag

① Set the Driver Registration Function ON by using IPAS Toolkit. (Please refer to IPAS Toolkit User Manual for more details.)



② Once Driver Registration Function is completed, connect the indicator to the vehicle.



③ Place the PT within 1m range from the VT.



4 Press and hold SET2 button for 2 seconds.



⑤ PT is registered as a driver tag with the voice message. "Registered." (The beep sound will occur in case of failure.)

How to Release Driver Tag

N

O



① Press and hold SET2 button for 2 seconds.



- ② PT is released as a normal tag with a beep sound.
- Only 1 PT per 1 Indicator is available for registration. (Release the existing registered PT prior to register another PT as a driver tag.)
- 2. Driver Tag is automatically released once the power is OFF.

How to Deactivate the Driver Registration Function

Set the Driver Registration Function OFF by using IPAS Toolkit.

7. How to use

Indicator Instruction that a driver must know

Situation	LED Lamp Status	Alarm	Mute Alarm
When a pedestrian/vehicle approaches Caution Area	Red / Green Light flashes gradually	Repeating "Watch Out"	Press STOP Button 1 Time Even if the alarm is OFF, the alarm
When a pedestrian/vehicle approaches Danger Area		Repeating "Danger"	will occur again when a pedestrian or other vehicle leaves the caution/ danger area and then re-enters.


- * When pedestrian enters and escapes out of Danger/Caution Area, for the safety of pedestrians, the alarm will go off from the point 1m further away that was set originally.
 - (Ex 1: PT Danger Area 2m, PT Caution Area 4m
 - ⇒ The alarm will continue until the pedestrian leaves 3m of PT Danger Area and 5m of PT Caution.)
- (Ex 2: VT Danger Area 4m, VT Caution Area 6m
 - ⇒ The alarm will continue until the vehicle leaves 5m of VT Danger Area, 7m of VT Caution.)

Wolume Control: Refer to 8P

How to use "PT" that pedestrians must know

Situation	LED Lamp Status	Alarm	Alarm Pause	Mute Alarm
When a pedestrian (PT) trespass on the Caution Area	Green Flash	① "Beep-Beep-" sound ② Vibration (short interval) ③ Both ※ Depends on menu setting	Press menu or power button one time.	Press menu or power button twice quickly. ("Beep" alarm will occur.) Even though alarm
When a pedestrian (PT) trespass on the Danger Area		① "Whee yooo whee yooo" (siren) ② Vibration (long interval) ③ Both ※ Depends on menu setting	Alarm will occur in 10 seconds automatically after pause.	ismuted (double click), in case that pedestrian escapes the set Danger / Caution Area and re- enters them, the alarm will go off again.
When the battery is low (Less than about 4 hours of use)	Red Flash	"Beebeep Beebeep" 5 times every 10 minutes.	-	-

- * When pedestrian enters and escapes out of Danger/Caution Area, for the safety of pedestrians, the alarm will go off from the point 1m further away that was set originally.
 - (Ex: If the Danger Area / Caution Area is set at 2m/4m, the warning sound of PT will go off until it escapes 3m of Danger Area and 5m of Caution Area from VT)
- Alarm type setting / Volume Control : Refer to 10P

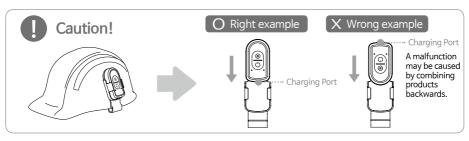

7. How to use - LED status display

LED Status	VT	Indicator	PT
Power ON	•	•0000	•
rowel ON	Green Flash	Green Flash	Green Flash
Power OFF	0	00000	•
Power OFF	LED Off	LED Off	After Red light blinks once, it turns off
Normal	•	•	•
Normal	Green Flash	Green Flash	Green Flash
Low Voltage	-	-	•
Battery	-	-	Red Flash
Patton Chamina	-	-	•
Battery Charging	-	-	Red On
Fully Charged	-	-	•
rully Charged	-	-	Green On
Entering PT Caution / Danger	• + •	• + •	•
Area	Green + Red flashing	Green + Red flashing	Green Flash
Entering VT Caution / Danger	• + •	• + •	-
Area	Green + Red flashing	Green + Red flashing	_

8. Check list before reporting failure

Question	Reason	Solution	
Access to PT MENU is unavailable. You can access the menu after turning on the power.		If you press and hold the power button for 2 seconds, the green LED will blink. Press and hold the menu button for 2 seconds afterward.	
There is a red LED on the PT.	It is a signal indicating low voltage when the remaining battery power is less than 4 hours.	Please charge it. When it is 100% charged, the green LED will turn on.	
The volume of VT sound is too low.		The indicator can be adjusted up to 5 levels. (How to adjust the indicator volume : see 8P)	
Can I mute the alarm when I drive a vehicle with a PT?	Mute of alarm sound is possible.	(How to mute alarm) * PT : Press twice quickly Menu or Power button with short intervals. * Indicator : Press STOP button once (When PT owner deviates and reenters the Danger / Caution area, the alarm will go off again)	
Can I pause an alarm to talk to a VT car driver for a moment?	It is possible to pause for 10 seconds. After 10 seconds, the alarm will occur again.	〈Alarm pause tip〉 * PT : 1 time quick press on Menu or Power button. (PT alarm will go off after 10 seconds automatically)	
Previously set distance of Danger/ Caution area is not precise.	A. The alert sounds in shorter horizontal distance depending on the installation height of VT. B. When getting inside and getting out of the Danger / Caution Area, alarm will go off 1m further from the set distance for the safety reason. (Example) In case of setting 2m for Danger Area and 4m for Caution Area, alarm will keep going off until getting out of 3m (Danger Area) and 5m (Caution Area).	In case of A and B, it is normal function but when they are thought to be an issue, it is recommended to initialize the indicator to reset the distance for use from a scratch. (See Indicator initialization and distance setting 8P)	

Please contact your local supplier for further inquiries.



WARRANTY



Warranty Term 1 year from the purchase date

Product Name	Model Name	
Place of Purchase	Date of Purchase	
Name of Customer	Phone Number	

* Service information

- 1. If a performance or functional failure occurs while proper using during the warranty period, the repair service is free of charge.
- 2. When the repair service is required, please present the warranty card with all information filled in.
- 3. The following cases will be charged for the repair regardless of warranty period.
 - · Failure due to careless use or improper repair or modification
 - · Failure due to non-compliance to the specifications stated in this manual
- 4. After the expiration of warranty period, a certain fee will be charged for the repair service.
- 5. The warranty card cannot be reissued.
- If failures occur when a person who is not in our service team tries to repair the product and breaks
 down, or uses components from other companies, we will not hold the responsibility for those failures.
- * Please contact the store where you purchased the product for the refund or exchange of the product.



- * Model No: PAS-K01-00 [PT], PAS-K01-10 [VT]
- * FCC ID: ZE8-PAS-K01-00, ZE8-PAS-K01-10
- * Manufacturer: KYUNGWOO SYSTECH, Inc. / KOREA
- * This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- * Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- * Note: The following statement applies to all products that bear the FCC logo on the product label. This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. See 47 CFR Sec. 15.105(b). These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- · Reorient or relocate the receiving antenna.
- \cdot Increase the separation between the equipment and the receiver.
- · Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.



- * Model No: PAS-K01-30 [Indicator]
- * FCC ID: ZE8-PAS-K01-30
- * Manufacturer: KYUNGWOO SYSTECH, Inc. / KOREA
- * This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- * Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- * Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



Distributor (or purchasing store)

* Any inquiry about the purchased product is contactable to distributor (or purchasing store) at below line.



770 W. Algonquin Rd. Arlington Heights, IL 60005

(847) 296-4279

sales@motorgc.com



KYUNGWOO SYSTECH, INC. 4F, Daeryung Post Tower 5, 68, Digital-ro 9-gil, Geumcheon-gu, Seoul, 08512, Republic of Korea

Tel. +82-2-985-8085 Fax. +82-2-985-8087 E mail. info@kigistec.com www.kyungwoo.com / www.kigistec.com